

USER INSTRUCTION

Art.3101 Telephone



Door release button:


Pressing this button at any time will release the door. (With or without the handset lifted.)

Service Button:

Normally Open Push Button which can be used to trigger other devices, such as gates, lights door strikes etc.


STEP 1

An incoming call will be signalled by an audible tone from the handset

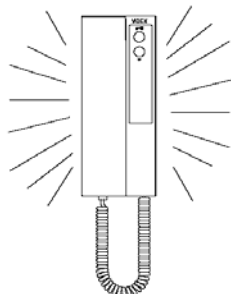

STEP 2

Pick up the handset and speak with the caller

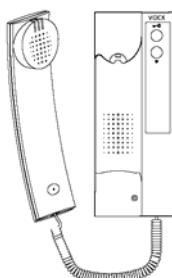

STEP 3

To open the door press the  button.
To end the call simply hang up

